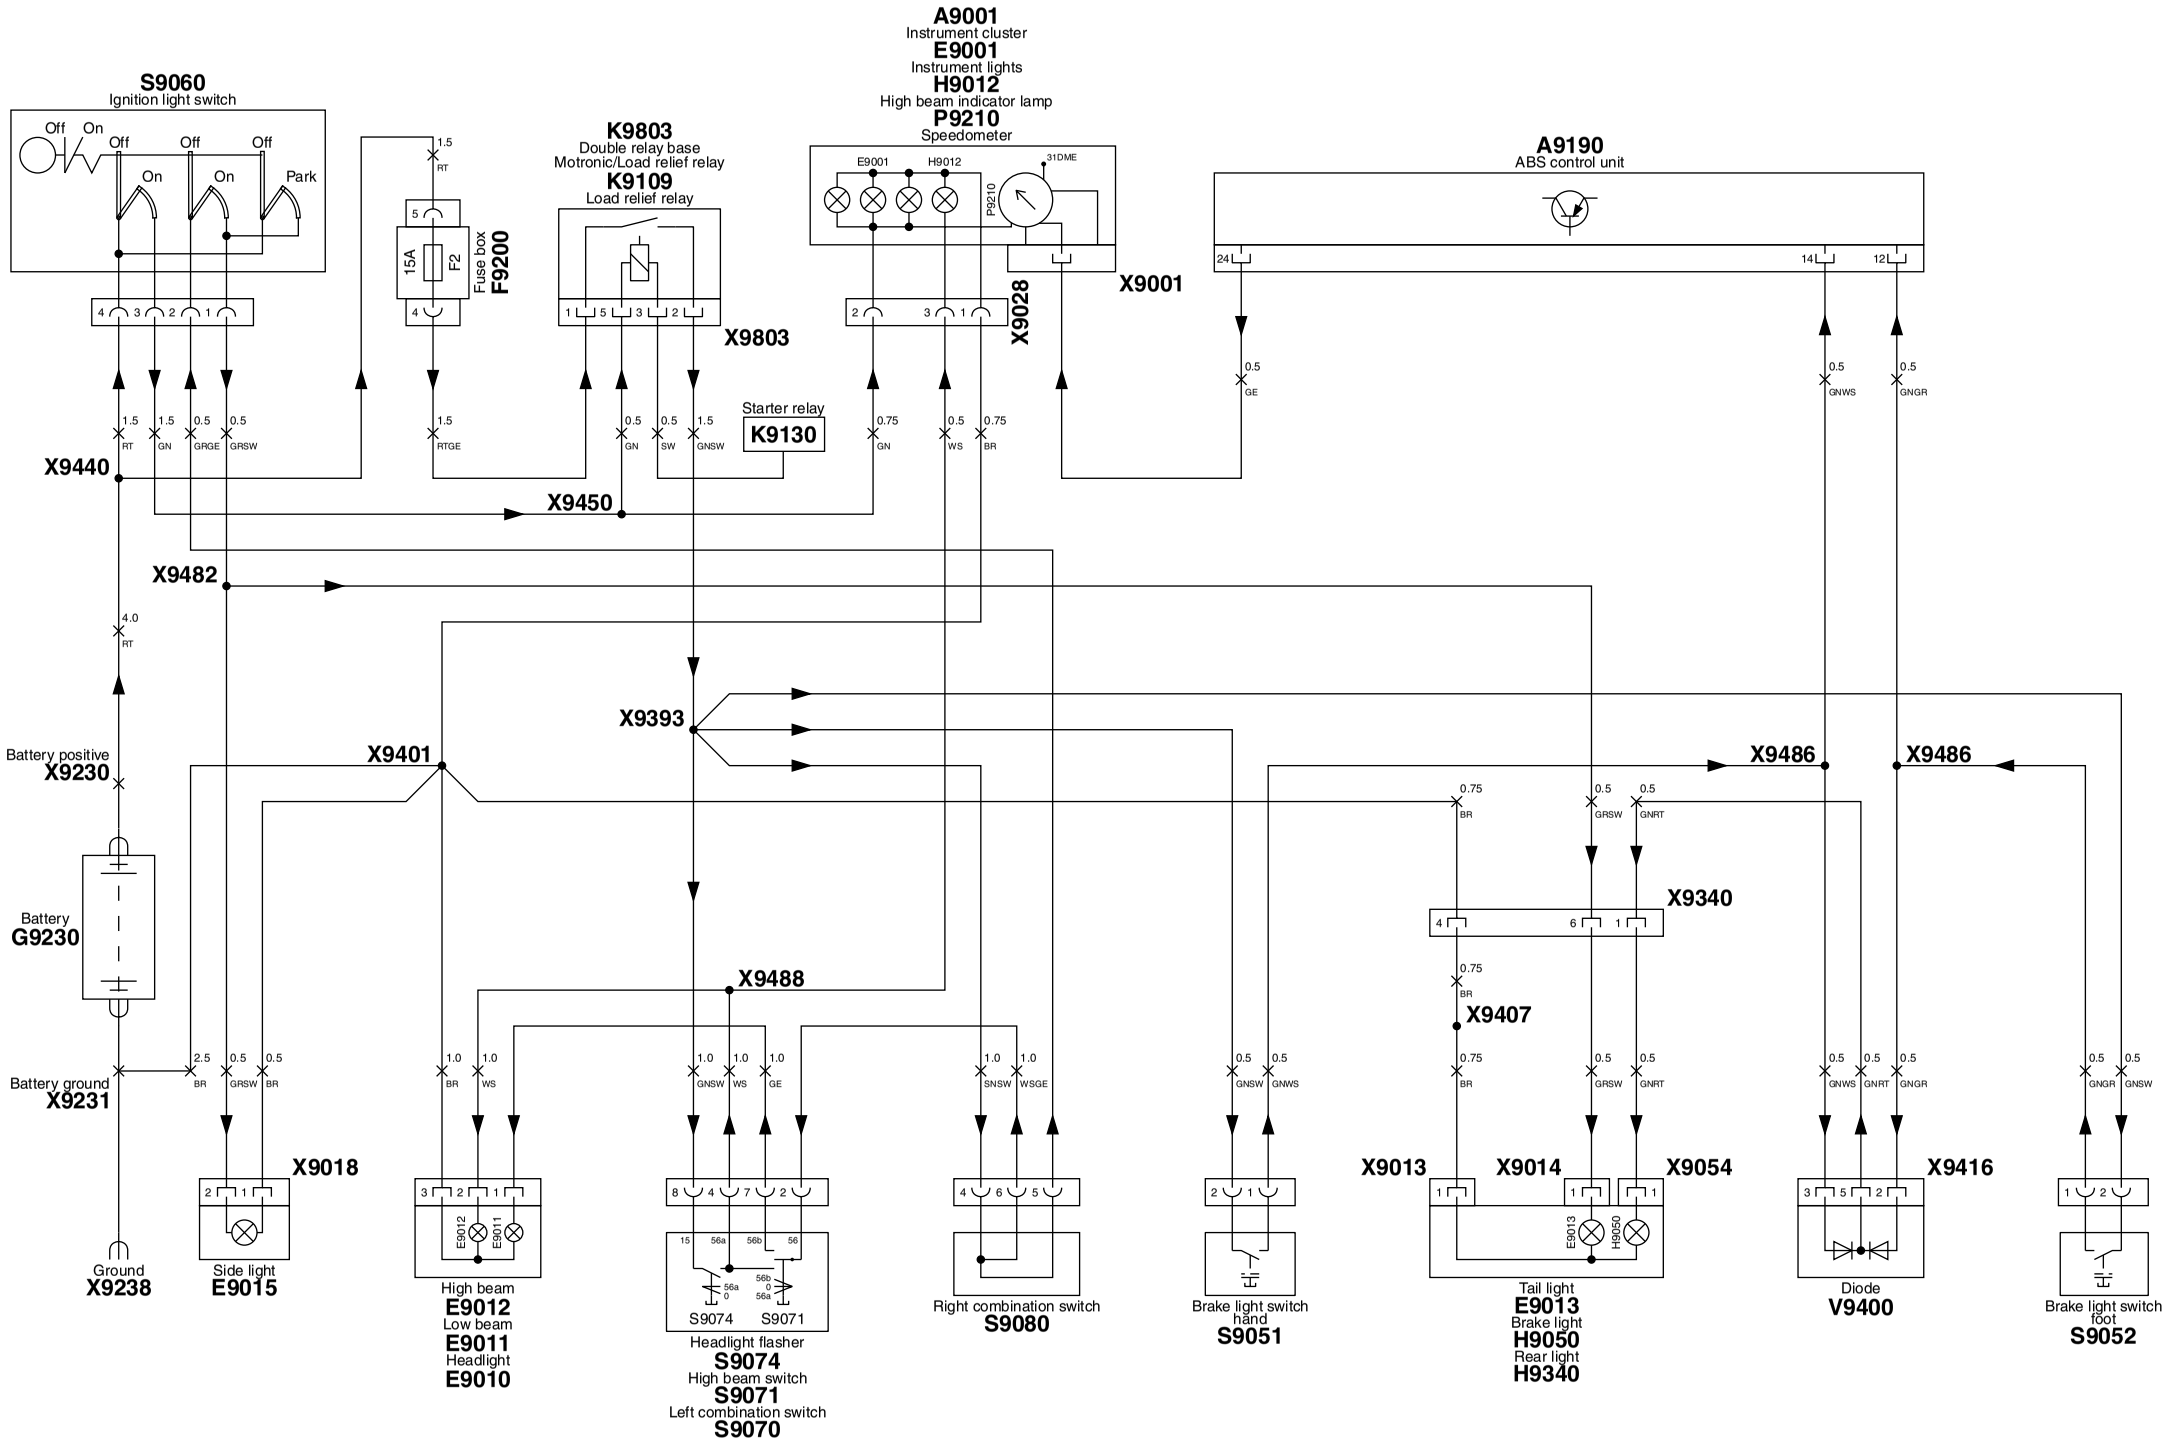
S9060
Ignition light switch
Off
On
Off
On
Off
On
Off
Park
K9803
Double relay base
Motronic/Load relief relay
K9109
Load relief relay
Fuse box
F9200
15A
F2
A9001
Instrument cluster
E9001
Instrument lights
H9012
High beam indicator lamp
P9210
Speedometer
31DME
X9001
X9028
X9803
A9190
ABS control unit
Starter relay
K9130
X9440
X9450
X9482
X9393
X9401
X9486
X9486
Battery positive
X9230
Battery
G9230
Battery ground
X9231
Ground
X9238
X9488
X9340
X9407
X9018
X9013
X9014
X9054
X9416
Side light
E9015
High beam
E9012
Low beam
E9011
Headlight
E9010
Headlight flasher
S9074
High beam switch
S9071
Left combination switch
S9070
Right combination switch
S9080
Brake light switch
hand
S9051
Tail light
E9013
Brake light
H9050
Rear light
H9340
Diode
V9400
Brake light switch
foot
S9052